



# ***ROUTINE JACK MAINTENANCE BULLETIN***

RJM 179

1 OF 1

**TO PROVIDE COMPLETE INFORMATION ON SERVICING  
ColumbusJACK/REGENT QUALITY GROUND HANDLING EQUIPMENT**

## **TRIPOD JACK LEVELING PROCEDURE SUPPLEMENT**

Leveling capabilities are supplied on many tripod jack models. This includes adjustable leveling footpads and a circular bubble level that is mounted on the jack. This bubble level is to be used as a reference to level the jack prior to lifting a load. Once a load is applied to the jack, the bubble level may deviate from the "centered" position indicated with no load applied. This movement of the bubble is not an indication of an out-of-level condition, but is a result of normal movement of the jack during the load lifting operation.