



ROUTINE JACK MAINTENANCE BULLETIN

RJM 201

1 OF 1

TO PROVIDE COMPLETE INFORMATION ON SERVICING ColumbusJACK/REGENT QUALITY GROUND HANDLING EQUIPMENT

PREVENTATIVE MAINTENANCE AND INSPECTION CRITERIA SERIES 7003, 9323 AND 9470 BEAD BREAKERS

The following Preventative Maintenance and Inspection Criteria is provided as a guide to insure that bead breakers are always ready for operation. The time intervals listed are a general recommendation only. The actual interval used should include factors for the climatic conditions in which the equipment is stored and the frequency of equipment use.

Prior to Operation

1. Inspect for damaged or missing components.
2. Inspect for oil leakage and proper fluid level.
3. Clean the floor of any substance that could cause the operator to slip while positioning the tire.
5. Fully extend and retract each cylinder to verify proper operation.

Every 30 Days

1. Drain air line filter as applicable.
2. Fill air line lubricator per manual instructions as applicable.
3. Inspect hard rubber spacers for damage and replace as required.
4. Apply a thin film of hydraulic oil to pivot pins and outer ram surfaces of all cylinders.
5. Check fluid filter condition indicator as applicable and replace as necessary.

Annually

1. Conduct 30 day maintenance.
2. Remove and clean in-line strainer as applicable.